

WATERCO

Water, the Liquid of Life
www.waterco.com

Waterco Limited ABN 62 002 070 733

OFFICES - AUSTRALIA

NSW (HEAD OFFICE)

Sydney
Tel : +61 2 9898 8686
Fax : +61 2 9898 1754

WA

Perth
Tel : +61 8 9344 5533
Fax : +61 8 9344 5506

VIC / TAS

Melbourne
Tel : +61 3 9879 5141
Fax : +61 3 9879 5143

QLD

Brisbane
Tel : +61 7 3299 9900
Fax : +61 7 3299 9911

SA / NT

Adelaide
Tel : +61 8 8244 6000
Fax : +61 8 8244 6011

DISTRIBUTOR ACT

Canberra
Tel : +61 2 6280 6476
Fax : +61 2 6239 1395

OFFICES - OVERSEAS

NEW ZEALAND

Auckland
Tel : +64 9 525 7570
Fax : +64 9 525 6580

MALAYSIA

Kuala Lumpur
Tel : +60 3 6257 2711
Fax : +60 3 6257 3695

UNITED STATES OF AMERICA

Phoenix Arizona
Tel : +1 623 434 4703
Fax : +1 623 434 4704

CHINA

Guangzhou
Tel : +8620 8335 1107
Fax : +8620 8335 1114


EUROPE

Kent, United Kingdom
Tel : +44(0) 1795 521 733
Fax : +44(0) 1795 522 085

P/N W992007/2003

WATERCO

Water, the Liquid of Life

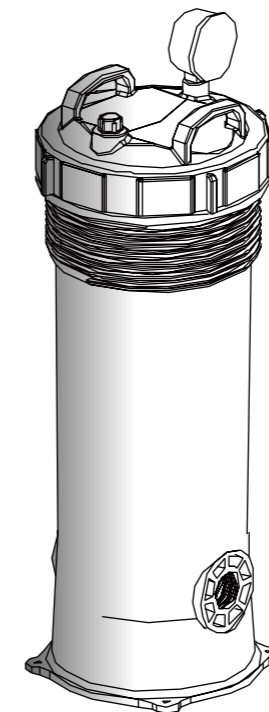


SLIMLINE CARTRIDGE FILTER

Member
**WATER
QUALITY
ASSOCIATION**



DESCRIPTION

The Slimline Cartridge Filter has been designed as a Space-Saving Cartridge Filter ideal for apartments. The Slimline Cartridge Filter is easily maintained with an easy to use lock ring lid for simple cartridge removal and replacement.

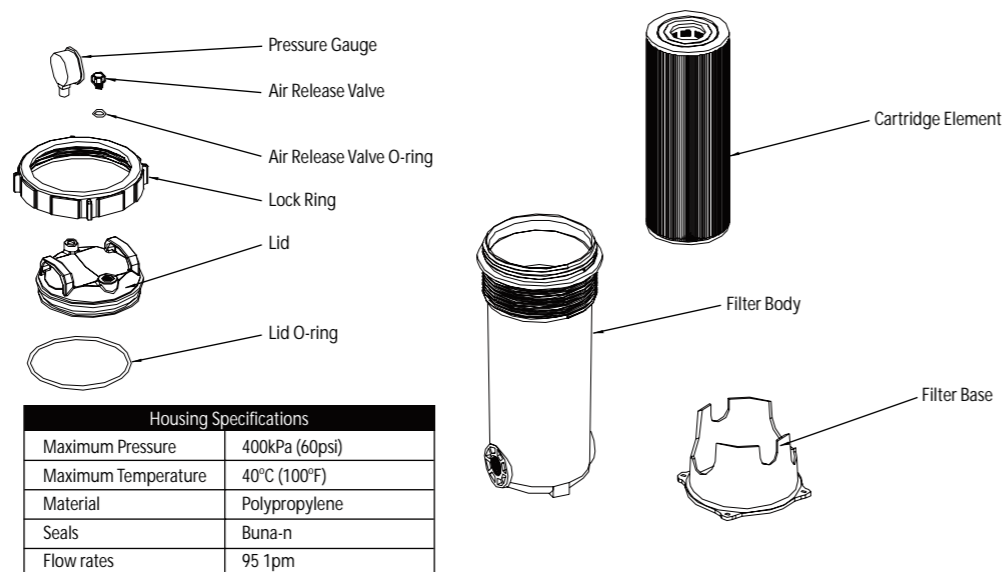

WATER FILTRATION

Water enters the housing through the bottom inlet port and flows through the pleated cartridge from the exterior to the interior. Particulates are retained on the outer surface of the pleated cartridge and clean liquid exits the housing at the base.

Note: A sediment filter removes dirt, debris and suspended solids, it does not sanitise the water.

POSITIONING


- The filter unit should sit on a level concrete surface or a precast concrete slab of suitable strength.
- The filter unit should be located near a drain, to minimise piping for waste.
- Position the filter away from direct sunlight.

INSTALLATION

- Be sure to comply with the local plumbing codes. The filter may be plumbed into a drinking water system and would therefore be subject to whichever local regulations may apply.
- Be sure that all provisions for wastewater disposal meet local, state or national codes. Do not discharge water where it will cause flooding or damage.
- Take special care with the waste line. If there is not an adequate air gap between the waste pipe outlet and the drain into which it discharges, a siphon may develop that will draw some of the drain waste back into the water filter. This may result in undesirable "cross connection" between a safe and unsafe water supply.
- If the incoming water pressure is higher than the maximum working pressure, a Pressure Regulating Valve (PRV) must be incorporated upstream to the filter inlet. The PRV should be at least 20mm (3/4") DIA.

PIPING

- To minimise pressure loss through the filter, all incoming connecting pipe work should be 40mm (1 1/2") DIA PVC Class E.
- For best efficiency, use the fewest possible fittings. This prevents a restriction in the water flow.
- A by-pass piping arrangement should be incorporated, which allows the entire filter unit to be easily isolated for servicing marked and maintenance, while ensuring continuous water supply.
- Filter connections are provided with an O-ring seal. To avoid damage to the O-rings, use a silicone base lubricant on the O-rings.
- Keep piping tight and free of leaks.

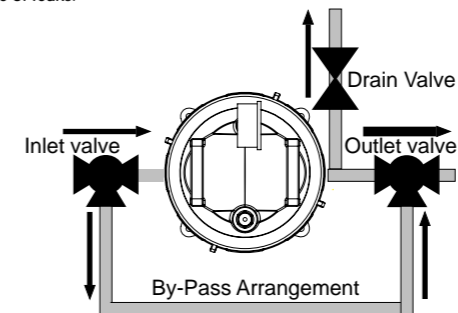

FILTER ELEMENT CHANGES

Cleaning Slimline Filter Cartridge Element

- 1) Turn off and lock out the pump, *(if installed)*.
If a By-pass Valve is fitted, the pump is not required to be turned off.
- 2) Close the Inlet and Outlet Valve (not supplied with the unit).
Open the By-pass Valve, if fitted.
- 3) Open the Air Relief Valve *(on the lid)* to release all air pressure from inside the tank and system.
- 4) Remove the lid manually by turning the lid lock ring counter clockwise.
- 5) Remove the filter cartridge and place it upright in an area suitable for washing.
- 6) Use a garden hose and nozzle to wash each pleat of the filter cartridge.
- 7) Thread the lid lock ring and reseal the filter tank. Hand tighten only.
When reassembling the lid, check the O-ring for cracks or tears. Replace if necessary.
- 8) Start the pump *(if installed)* and slowly open the Inlet Valve, fill the housing until water flows from the Air Relief Valve.
If a By-pass Valve is fitted, close the By-pass Valve and slowly open the Inlet Valve, fill the housing until water flows from the Air Relief Valve.
- 9) Close the Air Relief Valve and open the Outlet Valve. The filter is now back in operating mode.

CONDITIONS FOR CARTRIDGE REPLACEMENT

As filtration proceeds, the void areas in the medium become filled with debris filtered from the water. The pressure will start to rise and the flow of water will start diminishing. The filter will eventually become so clogged with debris that it will be necessary to either clean or dispose of the filter medium.

Cartridge replacement is determined by the following conditions:

- The pressure drop increases.
- The flow rate decreases until it is insufficient to meet the demand.
- The removal efficiency decreases to the point where the effluent quality deteriorates and is no longer acceptable.